



# INSTALLATION MANUAL

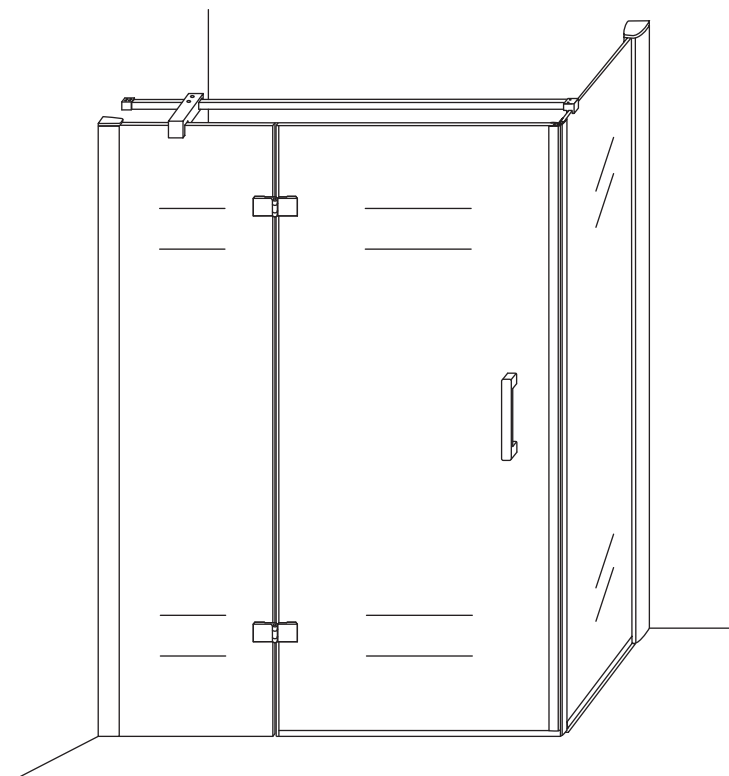


**RoHS** **CE** **ISO9001:2000**


# TOOL PICTURE

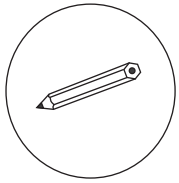


Pencil

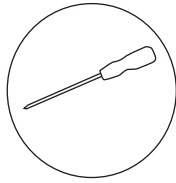


Cross screw driver

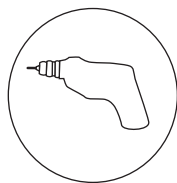


Drill machine

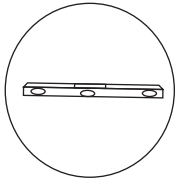

Level ruler

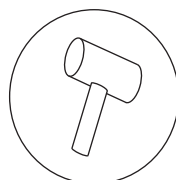


Rubber hammer

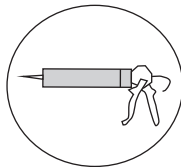


Silicon gel

## Accessory list

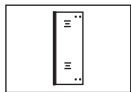


Glass

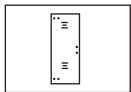


Glass




Glass

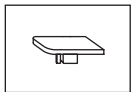


PJ-4509

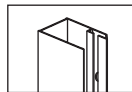


Wall profile

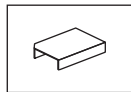

PJ-4733

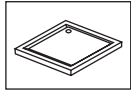

Tray

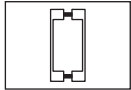


LS-1105




PJ-4577




CT-6BMX90

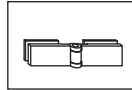


HY3109

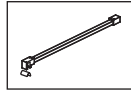


LG-2307

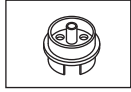


PJ-4126

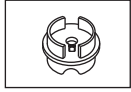


PJ-4127

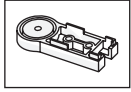


PJ-4124

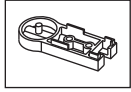

PJ-4125

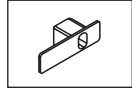

PJ-4649

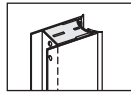


LJ-02




5x12

Screw

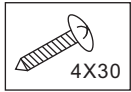


4X30

Screw

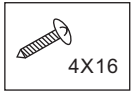


4X16

Screw

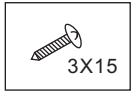


3X15

Screw

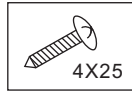


4X25


Screw

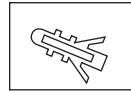


Expand tube

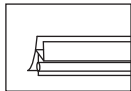


water-proof gasket

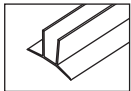

water-proof gasket

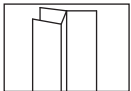


water-proof gasket


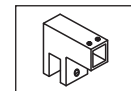


Alternative gasket


4. Use silicon gel to seal the gap between fixed glass

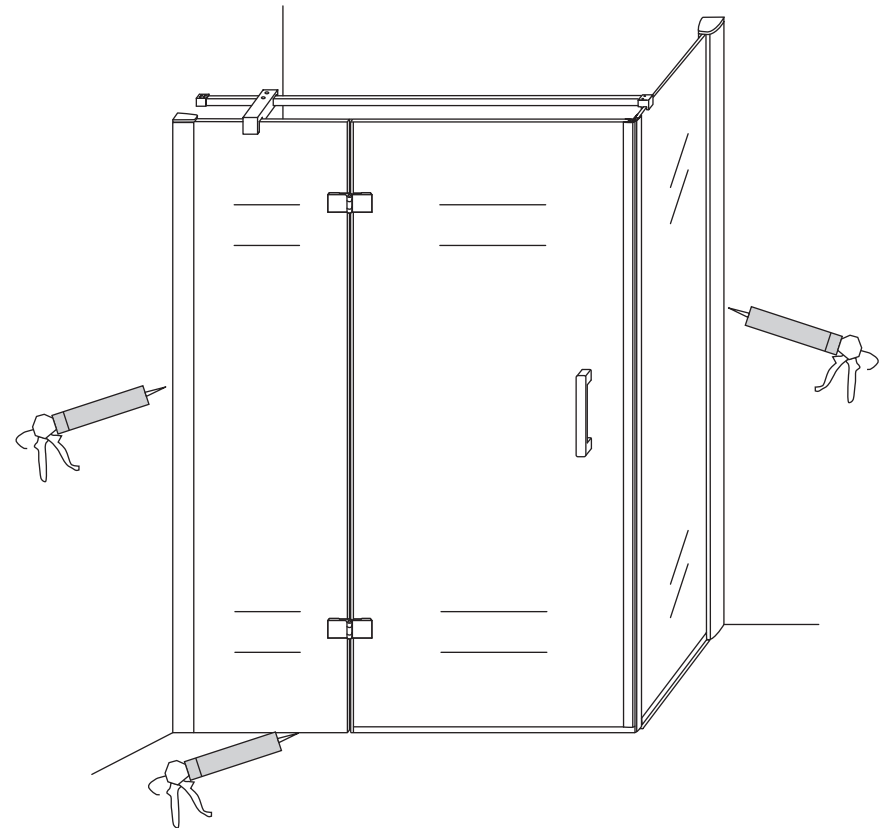


Install the support bar.

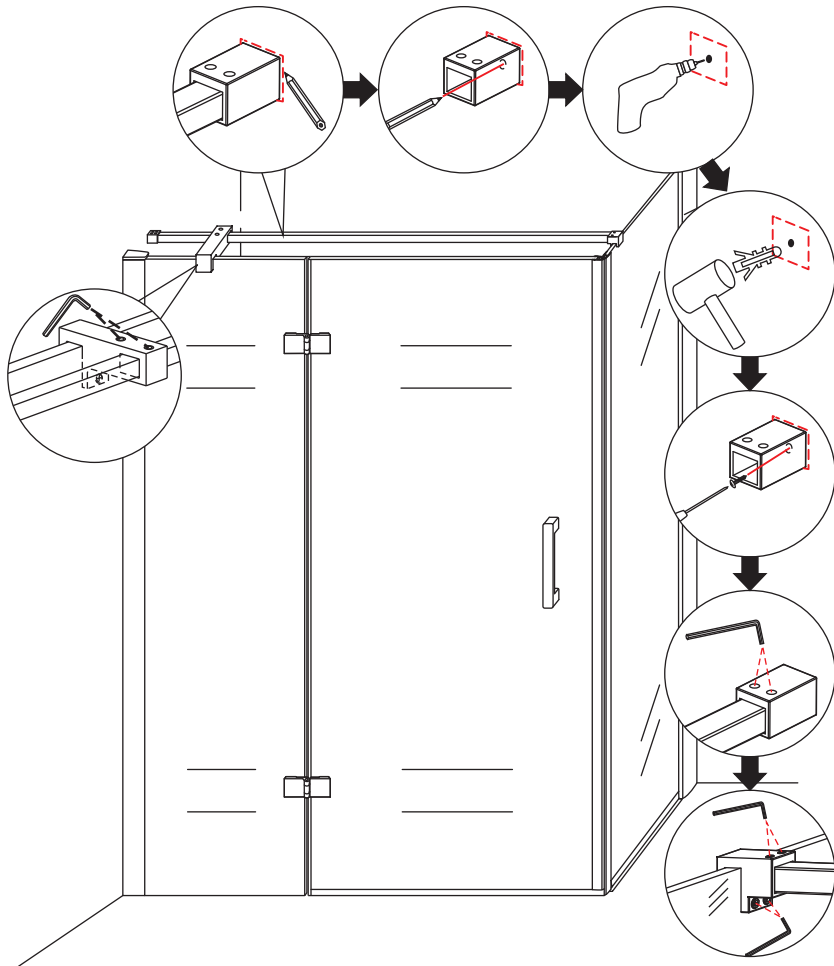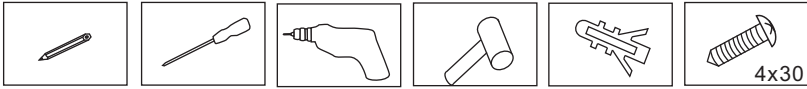

791-811(800X2000)  
 891-911(900X2000)  
 991-1011(1000X2000)  
 1091-1111(1100X2000)  
 1191-1211(1200X2000)  
 1391-1411(1400X2000)

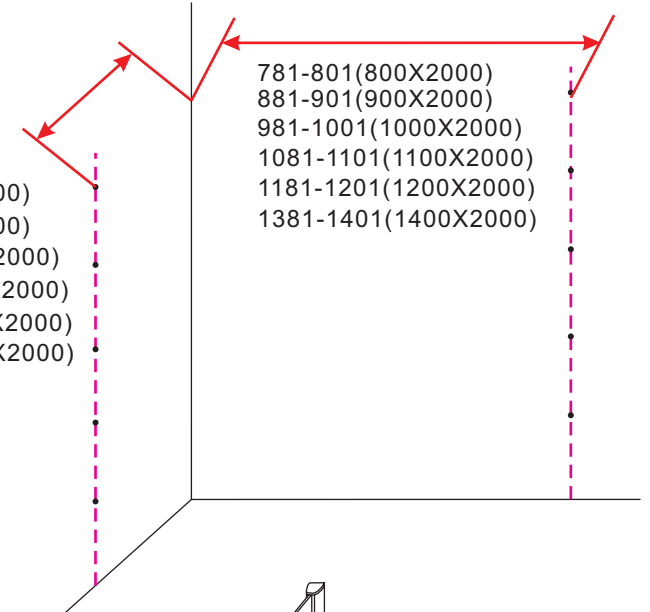



781-801(800X2000)  
 881-901(900X2000)  
 981-1001(1000X2000)  
 1081-1101(1100X2000)  
 1181-1201(1200X2000)  
 1381-1401(1400X2000)

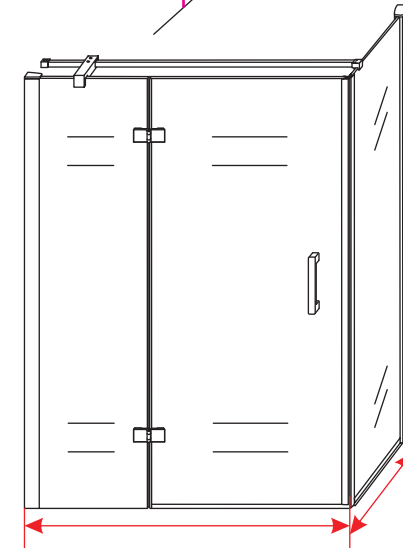


785-805(800X2000)  
 885-905(800X2000)  
 985-1005(800X2000)  
 1085-1105(800X2000)  
 1185-1205(800X2000)  
 1385-1405(800X2000)

795-815(800X2000)  
 895-915(800X2000)  
 995-1015(800X2000)  
 1095-1115(800X2000)  
 1195-1215(800X2000)  
 1395-1415(800X2000)



1. Install the wall aluminum profile, use the level ruler to make sure it vertical to the ground.

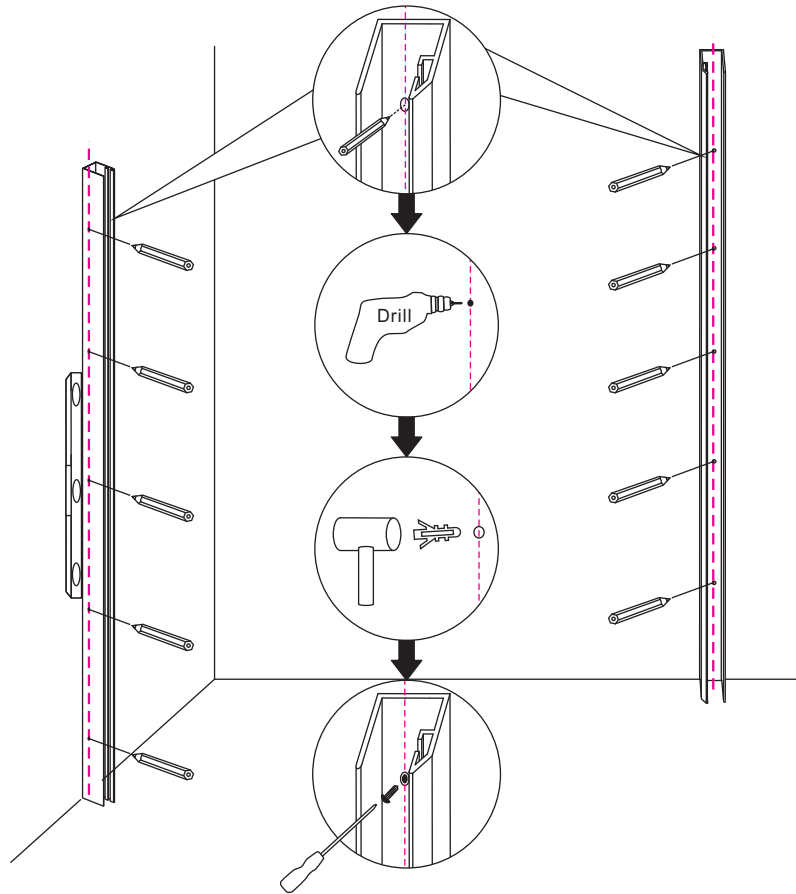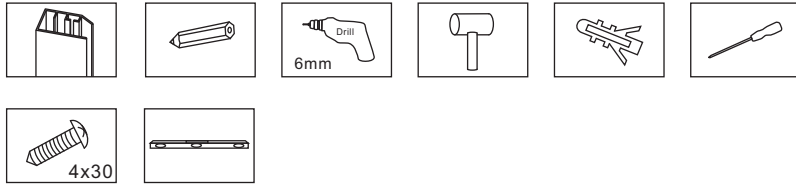



1. Use 4mm drill bit to make two holes on the aluminum and use screws to fix.
2. Install handle on the door.
3. Cover the cap for aluminum profile.

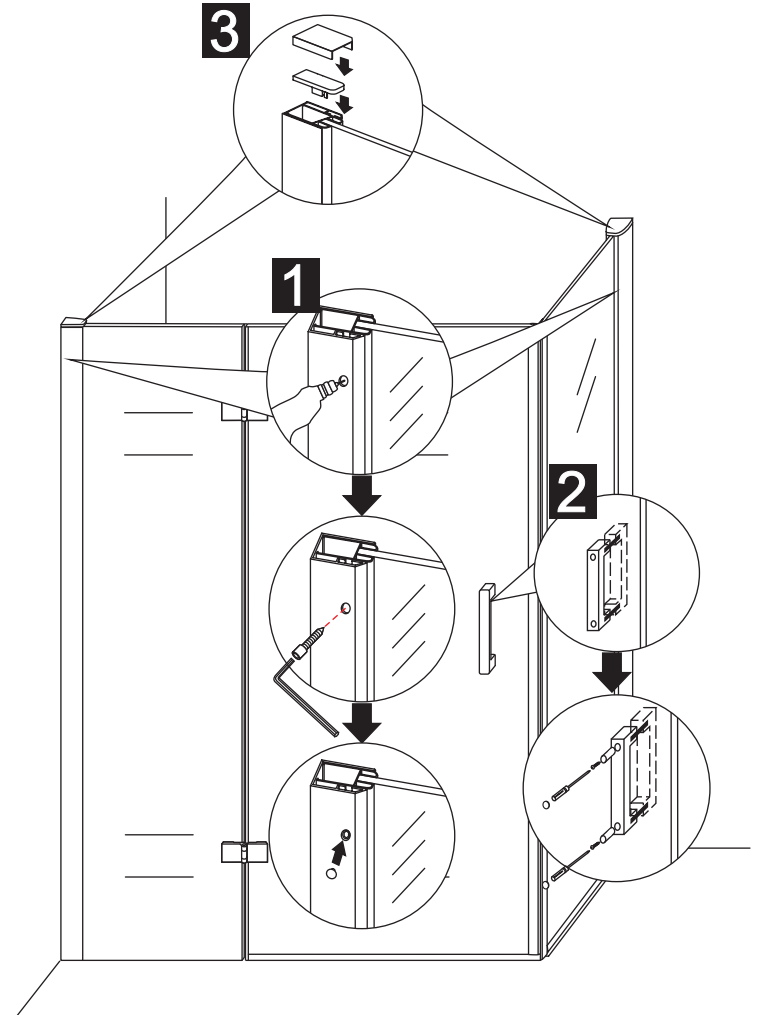



1. Install the second glass.

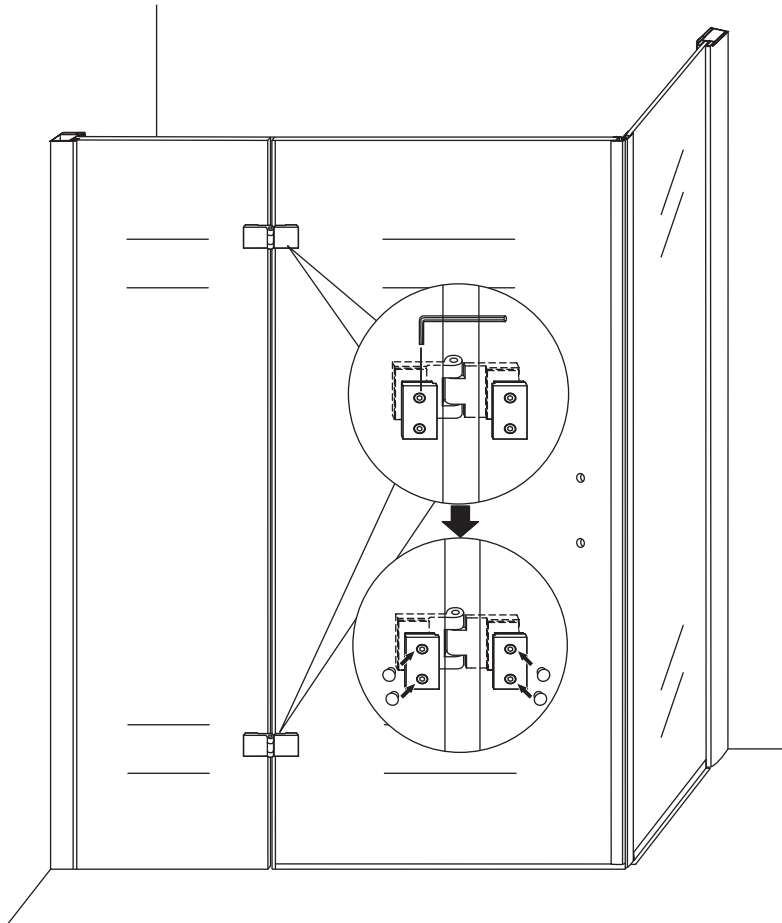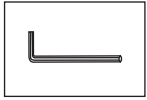

1. Insert the fixed glass into wall aluminum profile.
2. Install the magnetic gasket on the fixed glass.
3. Injection the silicon gel into the fixed glass aluminum profile then install the fixed glass into the wall aluminum profile.

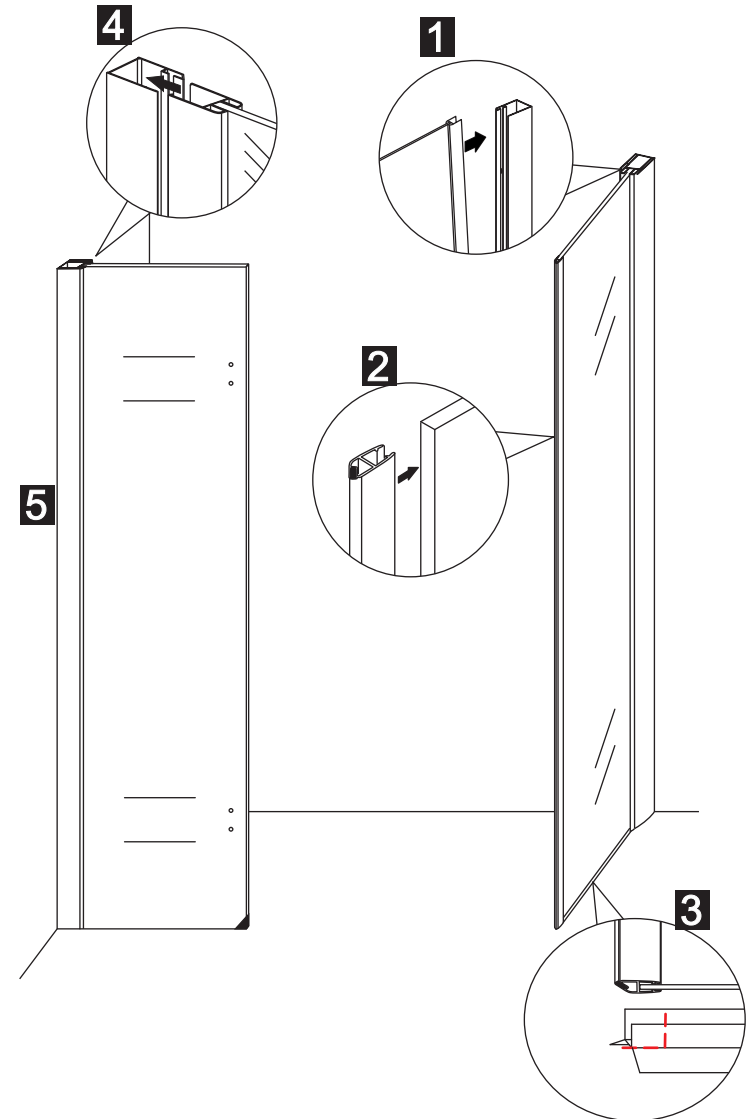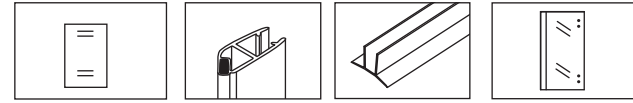

1. Install the hinge, use inner hexagon spanner fixed on the fixed door.

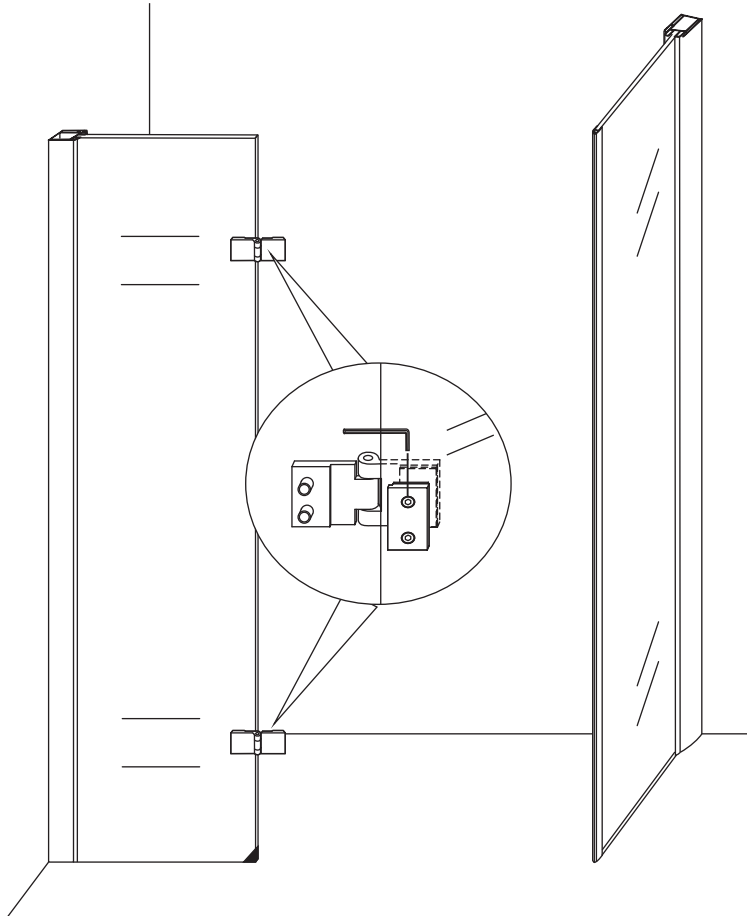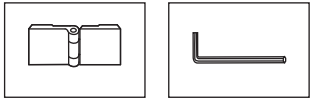

1. Cut the magnetic stripe and install

