



INSTALLATION MANUAL

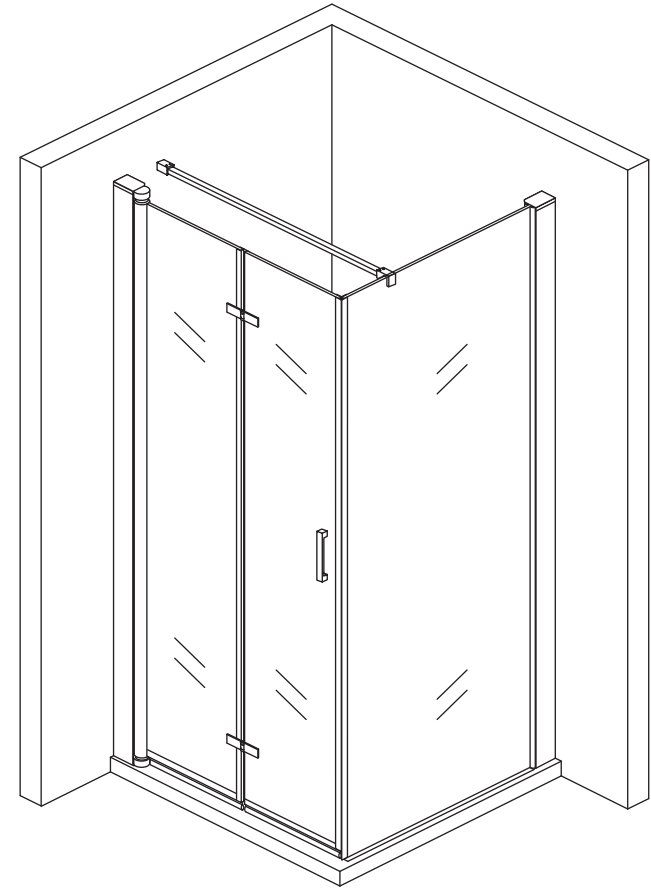


Vouwbare Nisdeur NANO 8mm

RoHS  **ISO9001:2000**


TOOL PICTURE

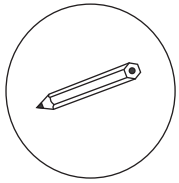


Pencil

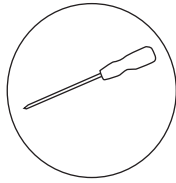


Cross screw driver

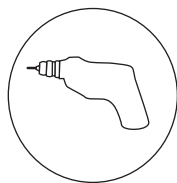


Drill machine

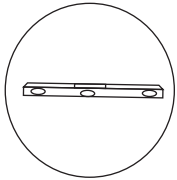

Level ruler

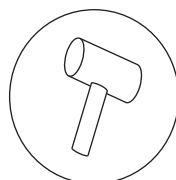


Rubber hammer

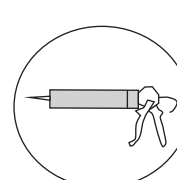


Silicon gel

Accessory list

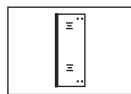


Glass

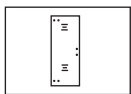


Glass




Glass

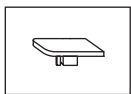


PJ-4509

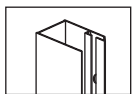


Wall profile

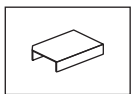

PJ-4733

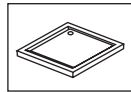


Tray

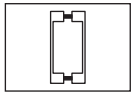


LS-1105




PJ-4577

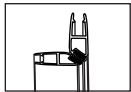


CT-6BMX90

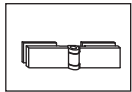


HY3109

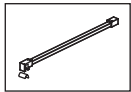


LG-2307

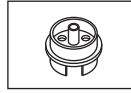


PJ-4126

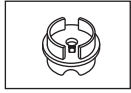


PJ-4127

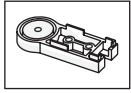


PJ-4124

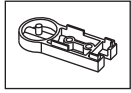


PJ-4125

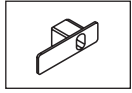

PJ-4649

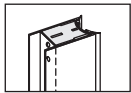


LJ-02

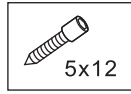


5x12

Screw

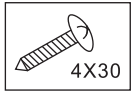


4x30

Screw

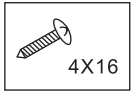


4x16

Screw

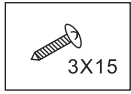


3x15

Screw

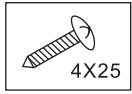


4x25


Screw

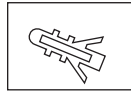


Expand tube

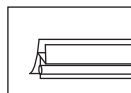

water-proof gasket


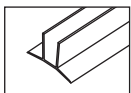


water-proof gasket


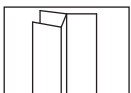


water-proof gasket


1. Install the handle on the door.
2. Install the decorative cover on the top of aluminum profile.
3. Use silicon gel to seal the gap between fixed glass and ground.

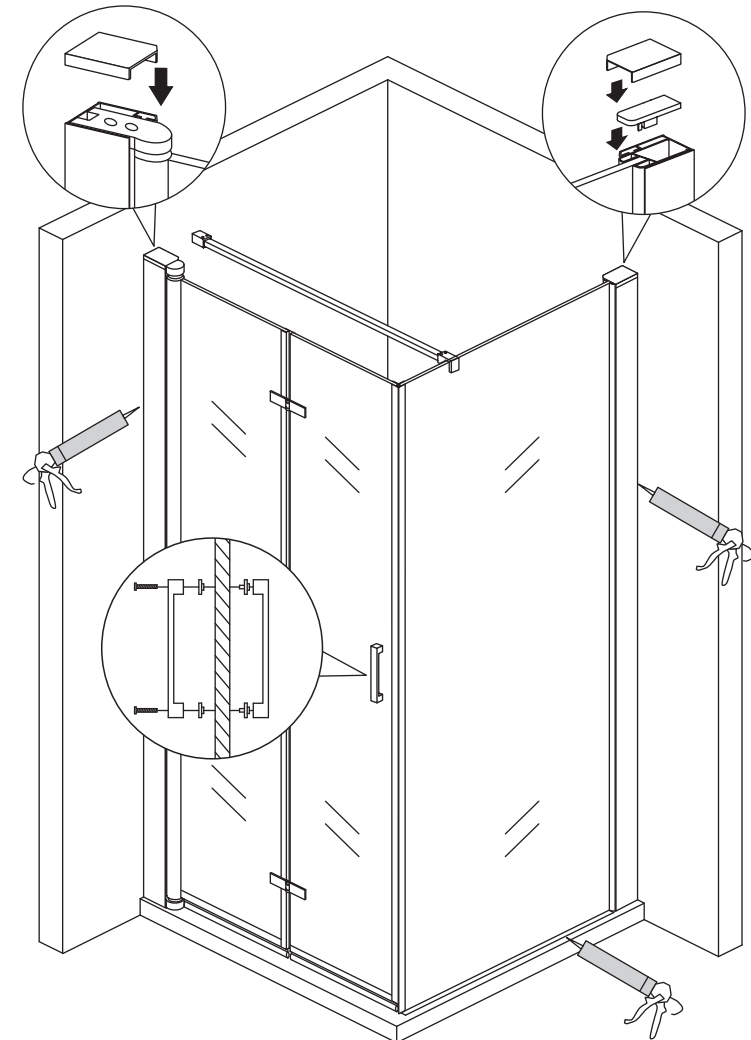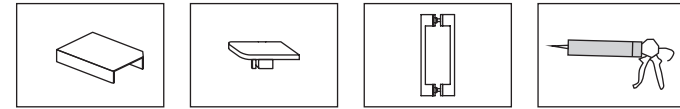

1.1. Use 4mm drill bit to make two holes on the aluminum and use screws to fix.

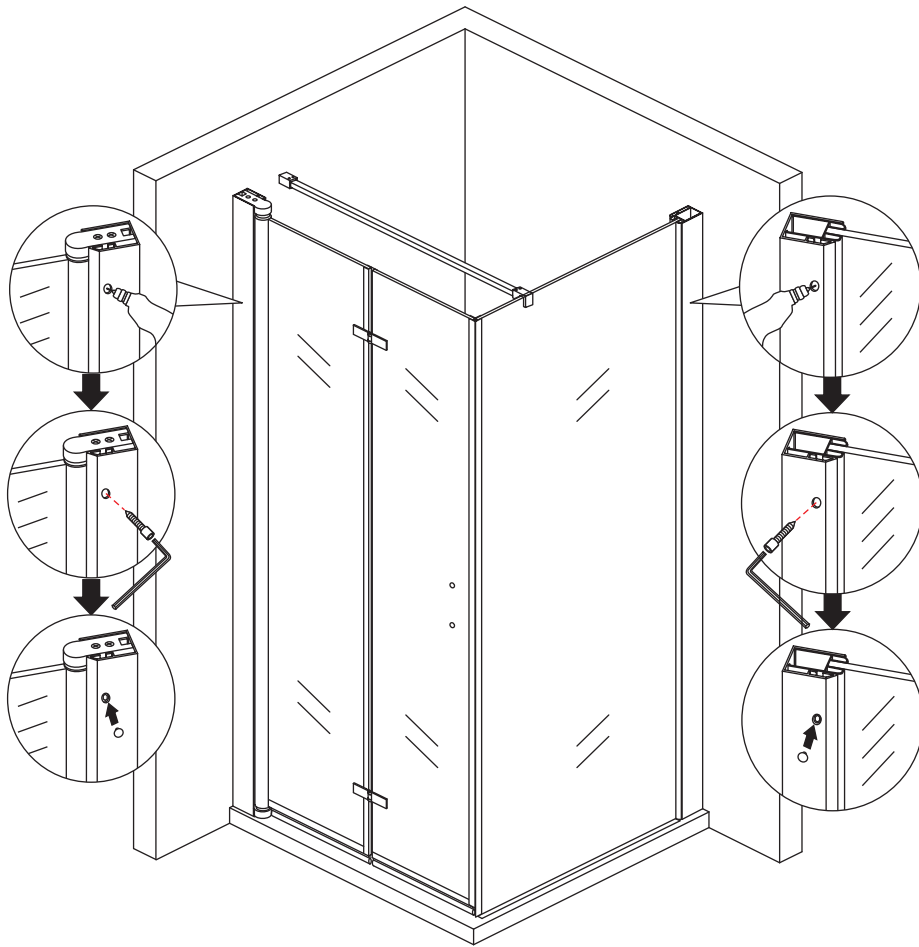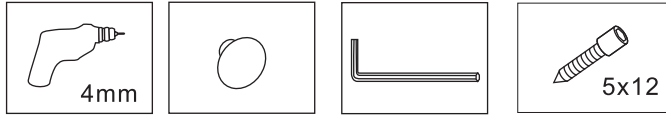


1. Place the shower tray on the installation place and use level ruler make it vertical and flat against the ground.
2. Use pencil and ruler draw the vertical installation line.


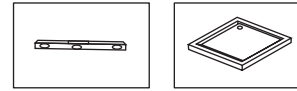


The installation size **L1** = Grootte van de Inloopdouche -25mm



The installation size **L2** = Grootte van de Vouwbare Nisdeur -25mm

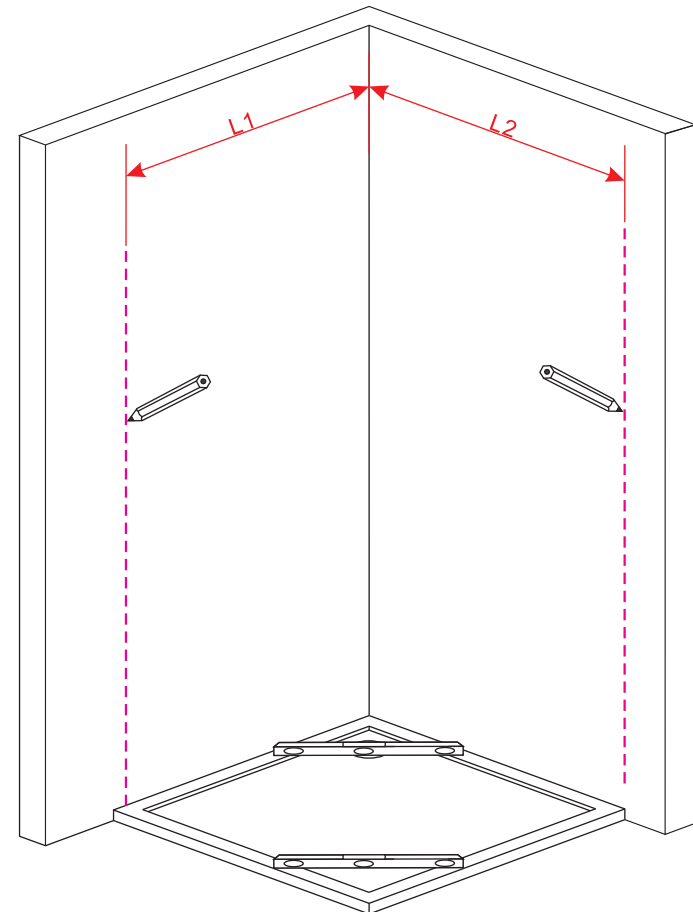



1. Put tray on the installation position.
2. Put aluminum profile on the wall and use level ruler to make it straight.
3. Use pencil draw holes on the wall.
4. Use 6mm drill bit to make holes on the wall.
5. Insert screw space pipe in the wall and screw it.

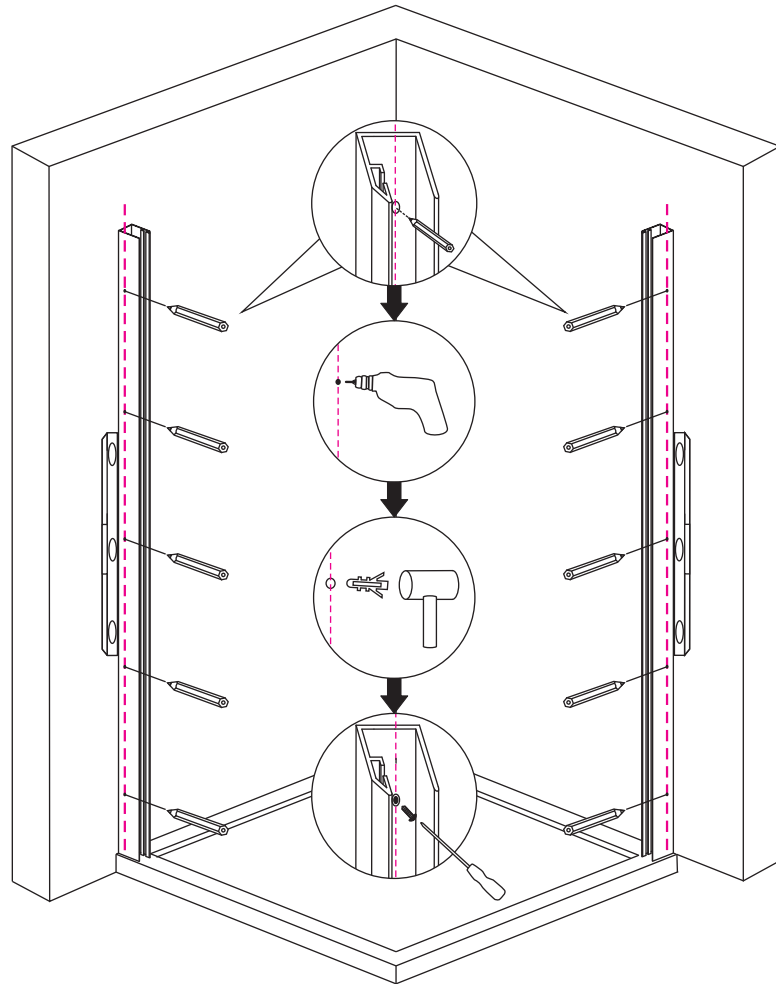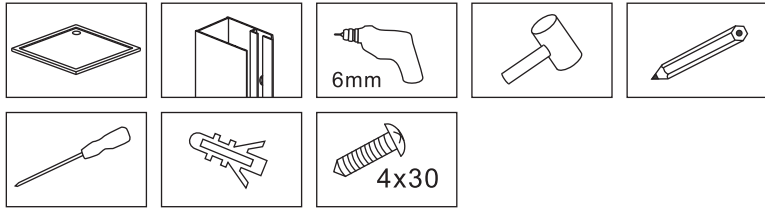

1. Fix the top support

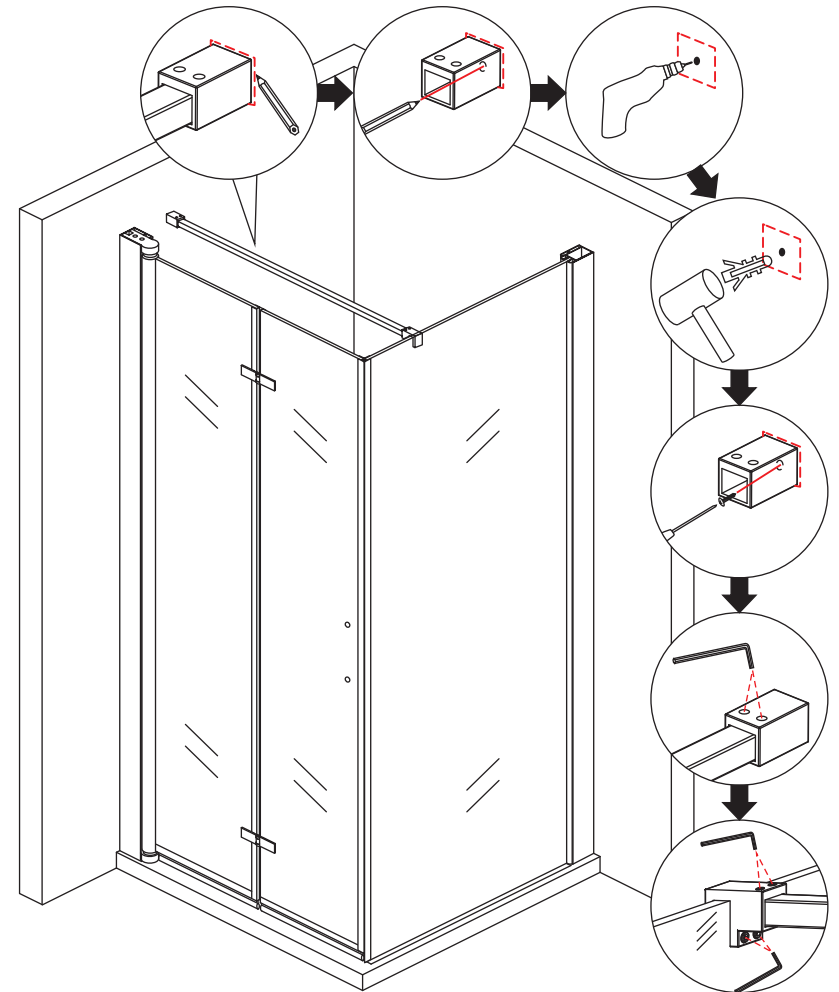
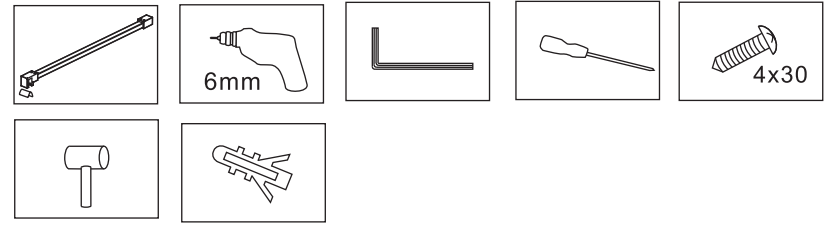


1. Insert the fixed glass into wall aluminum profile.
2. Install the magnetic gasket on the fixed glass.

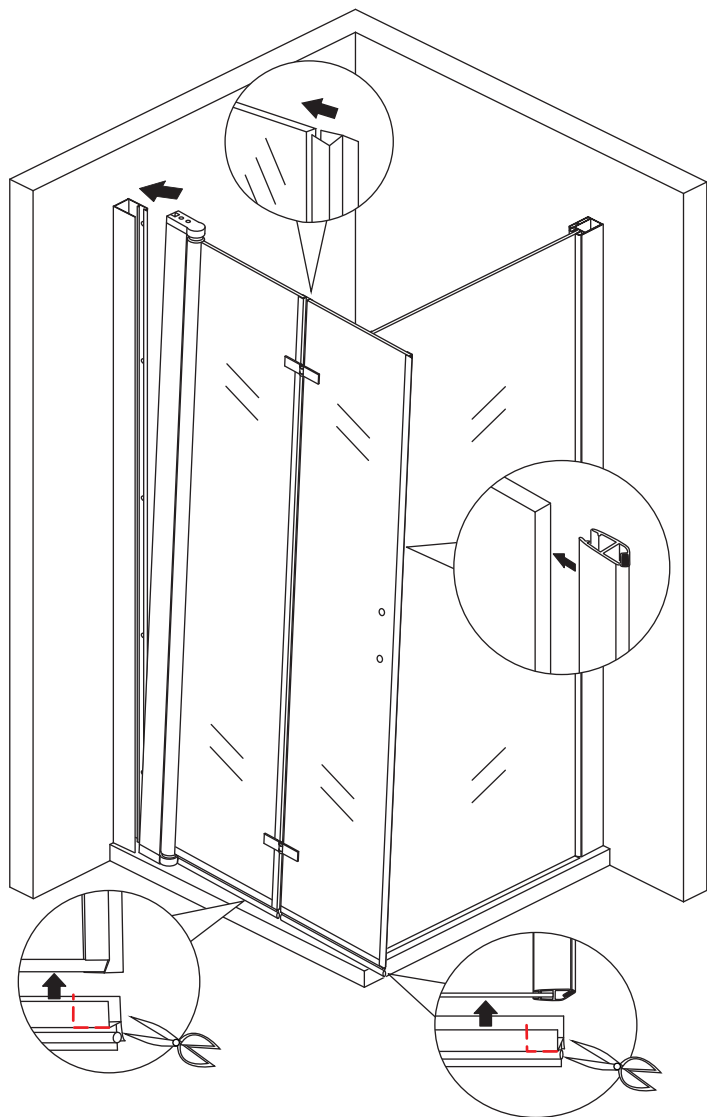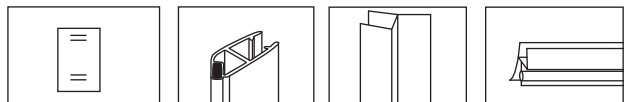



7

1. Insert the fixed glass into wall aluminum profile.
2. Install the magnetic gasket on the fixed glass.

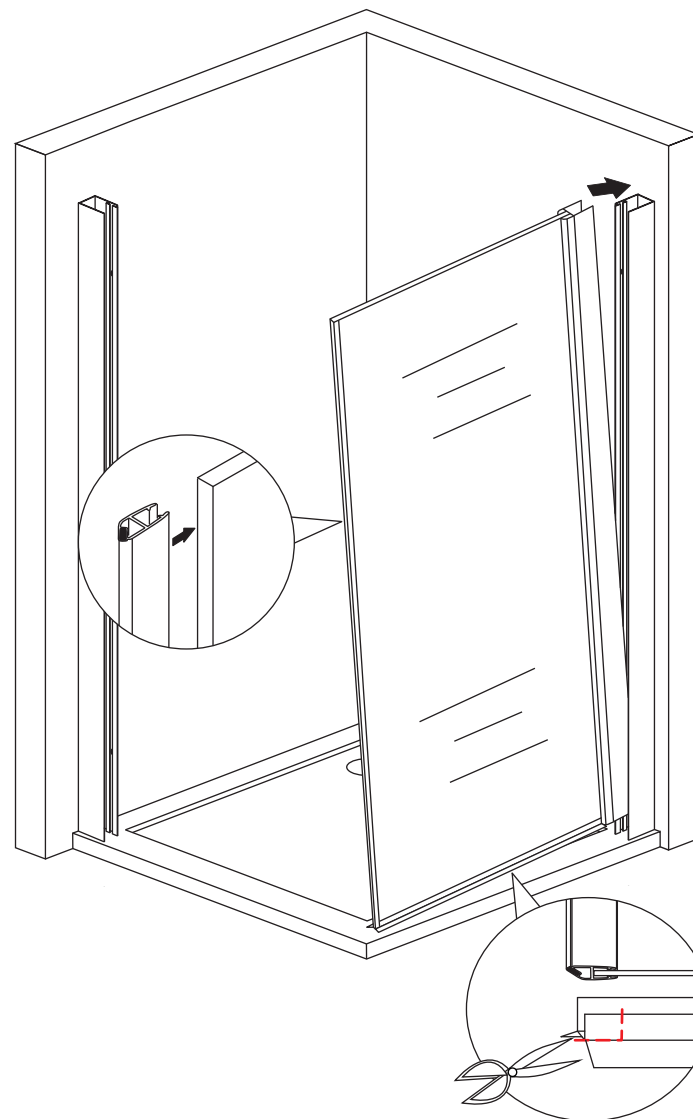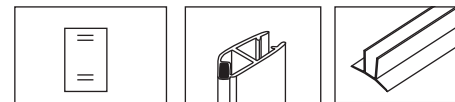



4

- 1.install the connect part on the swing profile top and bottom
- 2 .Use the zinc-alloy part connect the Swing profile and connect profile

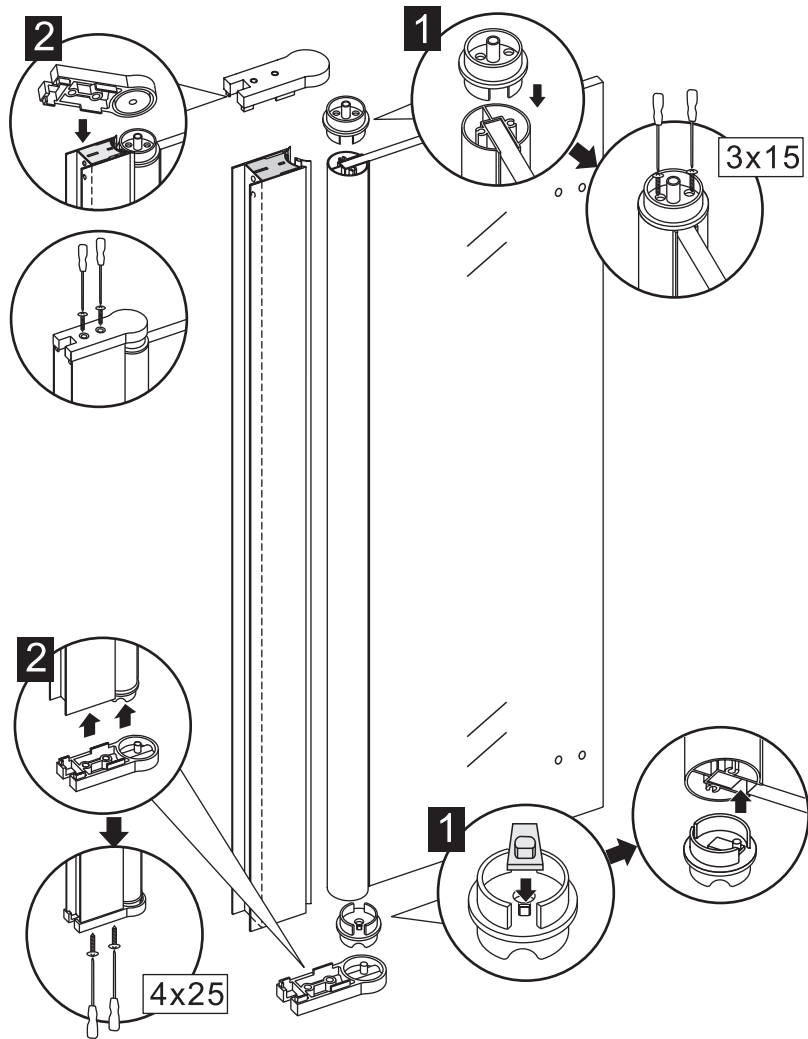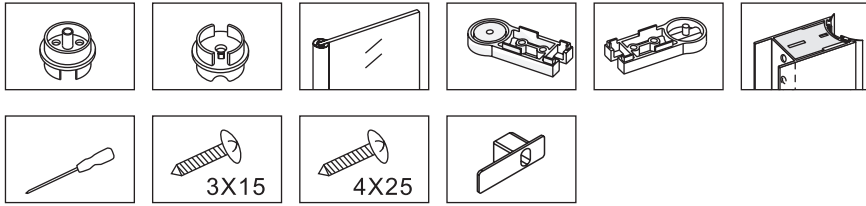

5

- 1.Use inner hexagon spanner install the hinge.

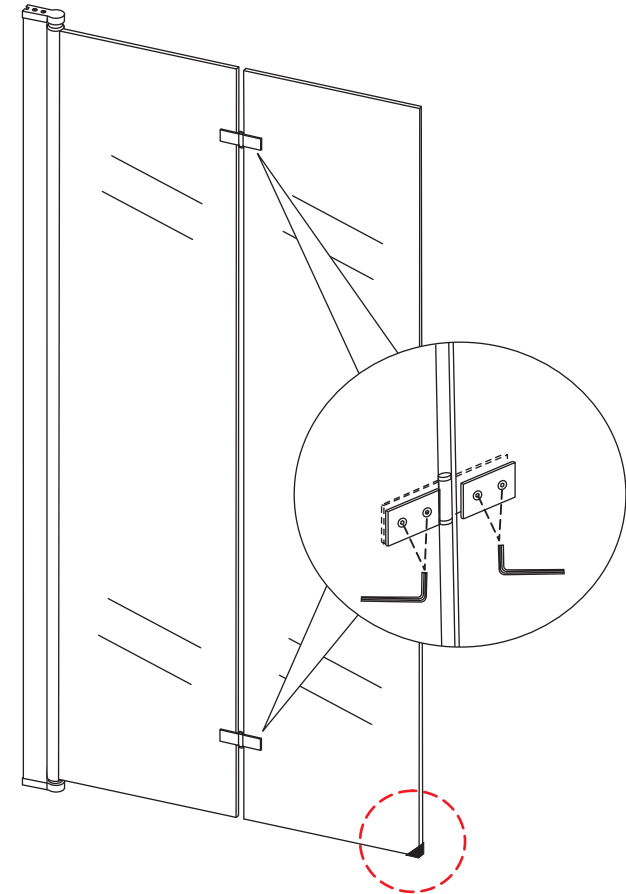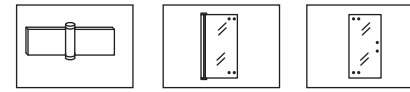

Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.



6